

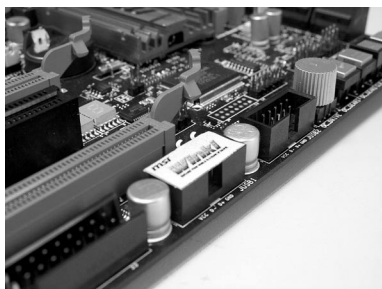


HOW TO INSTALL WINKI...

1. Turn off the computer.
2. Insert the Winki module to the JUSB pinheader on the mainboard. Please refer to the mainboard's user manual for the location of the JUSB pinheader.
3. Turn on the computer.
4. After the Winki Post screen, press F5 to enter Winki.

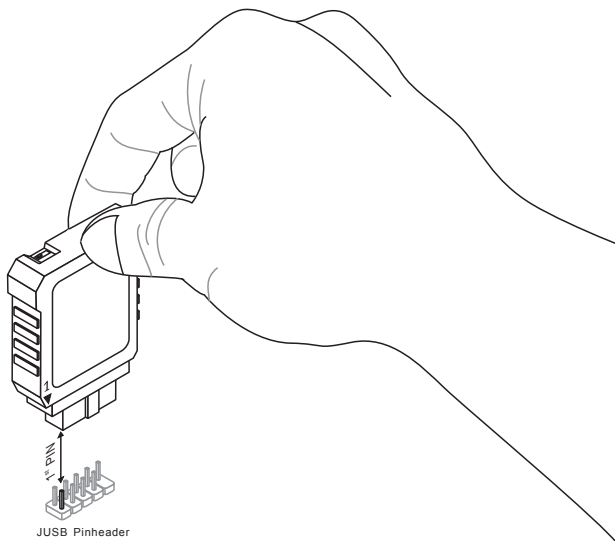

For 790FX-GD70 Winki Edition series mainboards.

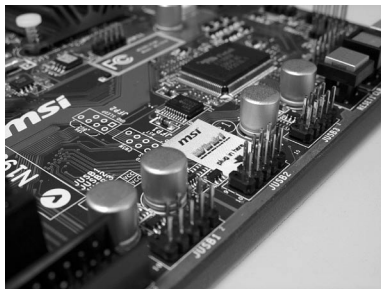

For 790GX-G65 Winki Edition series mainboards.

Important

Do not install or remove the Winki module while the system is on !!!